


# Big Digit Sport Watch

OWNER'S MANUAL — Please read before using this equipment.

## A QUICK LOOK AT YOUR WATCH

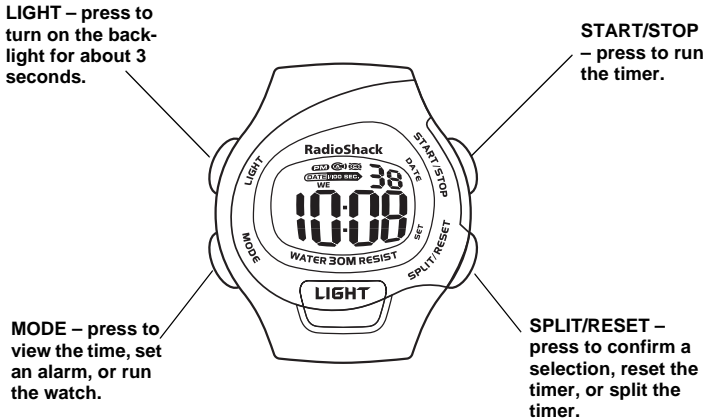

**Caution:** The watch is water resistant to a depth of about 100 feet (30 meters), but it is not water proof.

## SETTING THE TIME/DATE

**Note:** If you do not press a button for about 30 seconds, the watch exits its setup mode and stores the new settings.

1. Repeatedly press **MODE** until **TIME** then the current time appears.
2. Hold down **SPLIT/RESET** until **SET** appears. The second digit flashes.
3. Press **START/STOP** to reset the second digits to 00.
4. Press **MODE**. The minute digits flash.
5. Repeatedly press or hold down **START/STOP** to select the desired minutes.
6. Press **MODE**. The hour digits flash.
7. Repeatedly press or hold down **START/STOP** to select the desired hour.

**Note:** If the watch is set to the 12-hour time display format, select an AM or PM hour. **PM** appears at the top left of the display when a PM hour is selected.

8. Repeat Steps 6–7 to set the desired date, month, day of the week, 12- or 24-hour format, and date display format.

### Notes:

- When setting the date, you can select the date to appear in either the M-D (month-date) or D-M (date-month) format.
- There are always 29 days displayed for the month of February. If there are only 28 days in February for the current year, you must manually change the date from **2 29** (February 29) to **3 1** (March 1).
- If you need to set a date later than the last day of the displayed month (for example, if you want to set the date to August 31 and the month is set to **6** for June), you must set the current month first, then the day.

9. Press **SPLIT/RESET** at any time to confirm the settings and return to the time display.

The watch automatically displays the time. When you are using the daily alarm, the time reappears if you do not press any button for about 2 minutes.

To view the calendar, with the time displayed, press **START/STOP**. **DATE** then the month and date appear for about 5 seconds. Then the time reappears.

## SETTING THE DAILY ALARM TIME

1. Repeatedly press **MODE** until **ALM** then the last set alarm time appears.
  2. Hold down **SPLIT/RESET** until **SET** appears. The minute digits flash.
  3. Repeatedly press or hold down **START/STOP** to set the desired minute, then press **MODE**. The hour digits flash.
  4. Repeatedly press or hold down **START/STOP** to set the desired hour.
- Note:** Be sure to select an AM or PM hour in the display format. **PM** appears at the top left of the display when PM is selected.
5. Press **SPLIT/RESET** to store the setting.
  6. To return to the time display, repeatedly press **MODE** or wait about 2 minutes.

To check the set alarm time, repeatedly press **MODE** until **ALM** then the set alarm time appears.

## TURNING THE DAILY ALARM/HOURLY CHIME ON AND OFF

1. Repeatedly press **MODE** until **ALM** then the set alarm time appears.
2. Repeatedly press **START/STOP** to turn the alarms on or off.
  - **ALM** appears when the alarm is turned on.
  - **CH** appears when the hourly chime is turned on.

At the set alarm time, the stopwatch beeps for about 20 seconds. Press any button except **LIGHT** to silence the alarm sooner.

When the hourly chime is turned on, the watch beeps twice at the beginning of each hour.

## USING THE STOPWATCH

1. From the time display, press **MODE** twice to view the stopwatch. **STW** then the last reading of the stopwatch appears.
2. Press **SPLIT/RESET** to reset the counter to 00:00, The watch beeps.

If you do not reset the counter, the stopwatch will start timing from the last reading.

3. Press **START/STOP** to start timing. The watch beeps and **STW** appears at the top left of the display (even if the time or alarm time is displayed).
- When the stopwatch reaches 59 minutes and 59.99 seconds, it sets itself to 0 then restarts.
4. To stop the stopwatch at any time, press **START/STOP**. **STW** disappears.

Using the Lap Timer

The watch is equipped with a split function for you to keep track of individual accumulated time.

1. While the stopwatch is running, press **SPLIT/RESET** to check the accumulated time at that instant. The watch beeps and **SPLIT** appears below **STW** at the top left of the display. The timer continues to run.
2. Press **SPLIT/RESET** again to return to actively running view. The watch beeps and **SPLIT** disappears.

**Note:** If you press **START/STOP** while **SPLIT** appears, the timer stops and the total accumulated time appears.

CARE

Keep the watch dry; if it gets wet, wipe it dry immediately. Use and store the watch only in normal temperature environments. Handle the watch carefully; do not drop it. Keep the watch away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the watch's internal components can cause a malfunction and might invalidate its warranty. If your watch is not performing as it should, take it to your local RadioShack store for assistance.

Replacing the Battery

Your watch requires one CR2025 3-volt lithium button-cell battery (supplied) for power. When the display dims or the watch stops operating properly, replace the battery. For the best performance and longest life, we recommend a RadioShack lithium battery.

**Caution:** Use only a fresh battery of the required size and recommended type.

1. Use a small Phillips screwdriver to remove the screws from the back cover. Then lift off the cover.
2. Use a pin to carefully unlatch one of the battery clips and remove the battery cover.
3. Remove the old battery. Hold down **LIGHT** for about 5 seconds. Then place the fresh battery in the compartment with the positive (+) polarity symbol up.
4. Replace the battery cover, then replace the back cover with the arrow pointing toward **LIGHT** and secure it with the screws.

**Note:** Be sure the arrow on the back of the case points toward **LIGHT**. Otherwise the alarm will not sound.

Warnings:

- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the watch for a month or more, remove the battery. Batteries can leak chemicals that can destroy electronic parts.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99